

7 Safety & warranty

- ✓ This product uses low-power radio; nearby environment can affect performance.
- ✓ Avoid humid places, strong magnets and sources of electrical interference.
- ✓ Use only the supplied DC 12 V / 1 A adapter. Do not use damaged cords or loose outlets.
- ✓ Never disassemble, repair or modify the product yourself.
- ✓ Do not plug in or unplug with wet hands; unplug by the plug, not the cord.
- ✓ Protect the unit from impact and do not use it for anything but calling.

Warranty

Faults occurring in normal use within the warranty period are repaired free of charge.

Paid service applies when:

- ✓ the warranty period has expired
- ✓ the warranty card is lost or incomplete
- ✓ damage was caused by the user
- ✓ damage was caused by natural disaster
- ✓ the product was disassembled by the user

The bell battery is a consumable — covered for 12 months from purchase.

NeCALL · +82-1544-5847 · sales@necall.kr · www.necall.kr

1F, Bldg. A, 58 Janghang-ro, Ilsandong-gu, Goyang-si, Gyeonggi-do, Republic of Korea

NeCALL

N400 Wireless Calling Monitor User Manual

Thank you for choosing NeCALL. Please read this manual before installing the product.



Model: N400

1 Buttons

- ✓ ESC — exit any setting · hold 3 s to set the display time
 - ✓ ENTER — register bells · confirm / save
 - ✓ ◀ — hold 3 s: ring-count setting
 - ✓ ▶ — hold 3 s: ringtone setting
 - ✓ ▲ / ▼ — volume (0–15) · change values
 - ✓ FUN — switch display mode (rolling / push) while setting display time
 - ✓ Power — use only the supplied DC 12 V / 1 A adapter
-

2 Register bells

1. Hold ENTER for 5 seconds — the set bell number appears with a voice prompt.
 2. Make the number you want with ▲ / ▼.
 3. Press ENTER once, then press the bell — the number is registered.
 4. Register the remaining bells the same way, then press ESC to finish.
-

3 Change a bell's number

1. Follow the same steps as bell registration.
2. If you hear “already registered”, press ENTER once more — the old number is erased and the new one is saved.
3. When all numbers are changed, press ESC to finish.

4 Sound

Volume

Press ▲ / ▼ to set 0–15. 0 = mute, 15 = maximum. Saved automatically.

Ringtone

Hold ▶ for 3 s → display shows “1” → choose melody 1–14 with ▲ / ▼ → ENTER to save → ESC to exit.

Ring count

Hold ◀ for 3 s → display shows “1” → choose 0–9 with ▲ / ▼ → ENTER to save → ESC to exit. 0 = rings continuously.

5 Display

Display time

Hold ESC for 3 s → display shows “15” → set 0–99 seconds with ▲ / ▼ → ENTER to save. 0 = the number stays on screen.

Display mode

Hold ESC for 3 s, then press FUN to switch between Rolling (cycles up to 7 recent calls) and Push (the newest call pushes the previous one out) → ENTER to save → ESC to exit.

6 Reset

1. Hold ▲ for 3 s — the display shows how many bells are registered.
2. Hold ENTER for 5 s — a bird chirp confirms the monitor is reset (all bells unregistered).
3. Press ESC to exit, then register the bells again.